

# SETUP INSTRUCTIONS

## Using Wireless SoundPower with Boom 2000™

### PLEASE READ

These instructions are intended to complement the instructions provided for each component in this kit. Please read each instruction sheet or manual provided.

WIRELESS  
**SoundPower**™  
Speaker Jack System



The wireless SoundPower speaker kit and Boom 2000 software give you complete wireless entertainment for your PC. The SoundPower Kit lets you listen to your PC's audio anywhere in the house, and Boom 2000 lets you control that sound remotely. The Boom 2000 software puts the control of up to three different multimedia applications together in one place - the SoundPower Remote.

# 1

### Set Up the SoundPower Wireless Speakers

Follow the instructions included in the SoundPower kit for connecting SoundPower to your speakers.

# 2

### Connect SoundPower to Your PC

Use the supplied mini-headphone to RCA cable to connect the output from your PC's sound card to the SoundPower Transmitter (VT35A). If your sound card has surround sound, you can connect one SoundPower Transmitter to the "Front" output and another (optional) to the "Rear" output.



# 3

### Connect the Boom Receiver

Find an available serial port on your computer and plug the Boom RF Receiver (model MR26A) into it. You can also plug the Boom Receiver into an X10 Firecracker interface (model CM17A). Tighten the plug onto the serial port.



# 4

### Install the X10 Boom 2000 Software

Download the Boom 2000 software from

<http://www.x10.com/software>

Next, run the downloaded file. This installs Boom 2000.

# 5

### Set Up Boom 2000 Software

You can use the Boom software to control up to three different media players of any type. First, right click on the Boom window and select "Players" from the pop-up menu. This will open the "Select Players" dialog.

Select the application to use for each type of media from the drop down menus. The options in the drop down menu are determined by the applications you have installed on your computer - if it's there you can use it!

While Boom 2000 is running press the red "Audio" button on your SoundPower remote, then 1 (MP3), 2 (DVD) or 3 (CD) to select the program you want to control. Press "Power" to start the player. You can now press PLAY, STOP, PAUSE, FF and REW on the remote to select and play MP3s and CDs that you normally access on screen. Use VOL+, VOL-, and MUTE to control the sound mixer on your PC.

For more help, see:

<http://www.x10.com/support>

www.x10.com

MODEL  
NUMBER:  
IN43A 0



99081 37036 2