

XCam Anywhere™ Indoor/Outdoor Color Video Camera (with microphone)

- Extremely small size.
- Plugs into X10's 2.4 GHz Video Sender.
- Powered from the Video Sender's plug-in power supply.
- Use it indoors or outdoors to monitor your front door, back yard, etc.
- Monitor a child's bedroom, etc.

Models SC15A
and SC16A

The SC15A (white) and SC16A (Gray) are very small and compact color video cameras that plug into X10's 2.4 GHz Video Sender (sold separately). The camera is powered from the Video Sender's plug-in power supply. The Video Sender transmits the video picture to the 2.4 GHz receiver connected to your TV located somewhere else in your home (up to 100 ft. away). It also includes a microphone so you can hear as well as see what's going on.

Refer to the setup and operating instructions that came with the 2.4 GHz Video Sender Kit, Model VK30A (sold separately). Make sure that the Video Sender (VT30A) and Video Receiver (VR30A) are set up and functioning properly.

1. Plug the video plug on the adapter cable into the yellow Video In jack on the Video Sender (transmitter).
2. Plug the camera's plug into the video adapter.
3. Plug the audio jack into either audio socket (red or white) on the Video Sender (transmitter).
4. Plug the adapter cable's power plug into the power jack on the Video Sender.
5. Plug the Video Sender's power supply jack into the adapter cable's power socket.
6. Plug the power supply into any 120V AC outlet.
7. Attach the camera to a wall in the location you want to monitor using the mounting bracket (supplied). Mount it with the cable coming out of the bottom.
8. Adjust the antenna on the Video Sender if necessary to aim it in the direction of the receiver you have connected to your TV or monitor.

X10 Wireless Technology, Inc. LIMITED 1-YEAR WARRANTY

X10.com, a division of X10 Wireless Technology, Inc. (X10) warrants X10 products to be free from defective material and workmanship for a period of one (1) year from the original date of purchase at retail. X10 agrees to repair or replace, at its sole discretion, a defective X10 product if returned to X10 within the warranty period and with proof of purchase.

If service is required under this warranty:
Call 1-800-442-5065, visit www.x10.com, or e-mail sales@x10.com.

X10.com, a division of
X10 Wireless Technology, Inc.
Visit www.x10.com/support for more help.

The Video Sender Kit Model VK30A (sold separately) includes the VT30A Video Sender (shown below) and the VR30A Video Receiver.

